

# ENGINE

## GENERAL MAINTENANCE

(2005/11-2006/01)

1. **INSPECT DRIVE BELT** (See page [EM-6](#))
2. **REPLACE SPARK PLUGS** (See page [IG-7](#))
3. **REPLACE AIR CLEANER FILTER**
  - (a) Remove the air filter.
  - (b) Visually check that the air filter is not excessively damaged or oily.
  - (c) Replace the air filter with a new one, if necessary.
4. **REPLACE ENGINE OIL AND OIL FILTER** (See page [LU-1](#))
5. **REPLACE ENGINE COOLANT** (See page [CO-1](#))
6. **INSPECT GASKET IN FUEL TANK CAP** (See page [EC-25](#))
7. **INSPECT FUEL LINES AND CONNECTIONS, FUEL TANK VAPOR VENT SYSTEM HOSES**
  - (a) Visually check the fuel lines for cracks, leakage, loose connections, deformation.
8. **INSPECT EXHAUST PIPES AND MOUNTINGS**
  - (a) Visually check the pipes, hangers and connections for severe corrosion, leaks or damage.
9. **INSPECT VALVE CLEARANCE** (See page [EM-8](#))

## GENERAL MAINTENANCE

(2006/01- )

1. **INSPECT DRIVE BELT** (See page [EM-7](#))
2. **REPLACE SPARK PLUGS** (See page [IG-7](#))
3. **REPLACE AIR CLEANER FILTER**
  - (a) Remove the air filter.
  - (b) Visually check that the air filter is not excessively damaged or oily.
  - (c) Replace the air filter with a new one, if necessary.
4. **REPLACE ENGINE OIL AND OIL FILTER** (See page [LU-1](#))
5. **REPLACE ENGINE COOLANT** (See page [CO-1](#))
6. **INSPECT GASKET IN FUEL TANK CAP** (See page [EC-28](#))
7. **INSPECT FUEL LINES AND CONNECTIONS, FUEL TANK VAPOR VENT SYSTEM HOSES**
  - (a) Visually check the fuel lines for cracks, leakage, loose connections, deformation.
8. **INSPECT EXHAUST PIPES AND MOUNTINGS**
  - (a) Visually check the pipes, hangers and connections for severe corrosion, leaks or damage.